## Temperature calibrator TP 3M255E.2 // TP 3M255E.2i

TP Premium // Multifunction // Room temperature...255 °C // RT...491 °F







#### **Highlights**

- Patented control technology Fastest stabilisation times on the market Time savings of up to 50 %
- Four functions in one calibrator (dry block / calibration bath / infrared / surface)
- · Large calibration volume / large calibration insert for simultaneous calibration of many devices under test
- · Patented touch screen function for simple and convenient operation
- · Automatic generation of the calibration certificate
- Optional as pharmaceutical and food industry version with stainless steel housing
- · Accessories: device under test management with barcode scanner
- Available with integrated measuring instrument → TP 3M255E.2i

#### **TP Premium**

The calibrators of the TP Premium series are characterised by their unparalleled performance and outstanding operating comfort. By means of the intuitive menu structure, all necessary inputs can be made quickly and easily. The large touch screen has plenty of room to display the reference, target and devices under test temperatures. At the end of a calibration process, the

TP Premium provides the complete calibration certificate. The continuously growing bandwidth of supported temperature ranges supports an increasing number of temperature sensors on the market. They can be calibrated with a resolution of 0.001 °C / K and thus meet the highest requirements, e.g. of the food and pharmaceuticals industry.

#### **SIKA temperature calibrators**

Temperature calibrators are used for the verification of the functionality and calibration of temperature measuring devices and temperature sensors. As the sole German manufacturer of these devices, we develop and produce our "Made in Germany" temperature calibrators with a special focus on long-term reliability and utmost accuracy in combination with easy operation. We can rely on more than 40 years of experience in doing this: SIKA's first dry block temperature calibrator was launched all the way back in 1980.

Every SIKA temperature calibrator is meticulously tested for accuracy and stability. This is attested by our standard calibration certificate, which we issue with every temperature calibrator, or by means of an optional DAkkS calibration certificate [German accreditation body]. This is to guarantee that you receive a perfect product which can be traced back to national and international temperature measurement standards.

SIKA Dr. Siebert & Kühn GmbH & Co. KG
Struthweg 7-9 // 34260 Kaufungen // Germany
www.sika.net

#### **Features**

#### Four functions in one temperature calibrator

- · Covering all calibration tasks with only one model: Dry block, infrared and surface calibration as well as calibration by means of a calibration bath
  - → Cost savings due to a reduction in the number of versions required
- Quick and easy change between the calibration functions
- Additional calibration functions for your application
  - → Dry block for aseptic sensors
  - → Air Shield Insert for the best measurement uncertainties
  - → Different media for liquid calibration









Dry block calibration


Calibration bath

Infrared calibration

Surface calibration

#### Temperature control with "rocket controller"

- · Temperature regulator with model-based state control
- Special regulation algorithm based on knowledge and experience from space travel
- Unique temperature stability of  $< 0.001 \, ^{\circ}\text{C} / \text{K}$
- Anticipatory activation of the heating and cooling elements
  - → The settling time to the target temperature is reduced by approx. 90% at each calibration point
  - → Time savings of up to 50% with each calibration process

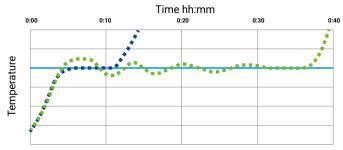

With rocket controller:

Without rocket controller: Long settling time to the target temperature Settling time to the target temperature reduced by approx. 90%



#### **Air Shield Insert**

- Patented dry block version with optimum radial and axial temperature distribution
- Automatic centring of the Air Shield Insert in the block
  - → User errors due to jiggling or twisting are excluded



#### **Features**

#### SIKA OS with touch screen

- Simple operation of the temperature calibrator via the integrated 7" touch screen
  - → Intuitive operation of the calibration functions
  - → Management of calibration data directly on the calibrator
- Clear display
  - → All important information at a glance
- Completely paperless calibration
  - → Value calculation and transmission errors are excluded
- Glass surface made of multi-panel safety glass
  - → Extremely robust against damage
  - → Easy cleaning of the surface
  - → Suitable for use in the food industry





#### **Automatic calibration with camera**

In calibration processes for devices under test with their own temperature display, the display of the DUT must be read for each calibration point. The read value is transferred by the user to the calibrator or the calibration certificate, and the subsequent calibration point is only approached after a manual acknowledgement. For this purpose, the user must return to the calibrator at each calibration point. In some cases, this can lead to long delays if the user carries out other tasks in between. With our automatic calibration with a camera, these time-intensive intermediate steps are no longer needed:

- The patented camera system automatically creates a recording of the DUT display at each calibration point.
   The subsequent calibration point is approached directly afterwards
  - → No user interaction is required during the calibration process, as it is implemented automatically
  - → All test points are approached without waiting times
- Upon completion of the entire calibration process, the user transmits the data of the created display records to the calibrator or calibration certificate
  - → During the entire calibration process, the user is free to carry out other tasks
- The visual records of the device under test display at each calibration point are saved and attached to the calibration certificate as verification







07/2023 // V1.6 3 // 12

#### **Features**

#### WebApp - Plug and play for your temperature calibrator

- With the WebApp, ongoing or completed calibration processes can be comfortably displayed on a PC or a smart phone
- The connection is made via LAN or WLAN (via router)
- The WebApp is opened via the browser of your PC or mobile phone. Installation of drivers or software is not required
- · Compatible with all current operating systems (Windows, Mac OS, Linux, iOS and Android)



#### **SIKA Gold Service**

SIKA Gold Service provides a comprehensive service package for the regular recalibration of your temperature calibrator. You will benefit from exclusive savings and discounts as well as special promotions reserved to SIKA Gold Service members.

- You will save 33% in the recalibration of your temperature calibrator
- You will receive a 10% discount on any repairs that may become necessary
- You will receive preferential invitations to product presentations, symposia, practice days and exclusive training offers

Register now and benefit from the SIKA Gold Service: gold-service.sika.net



## **Technical data**

Temperature range	Room temperati	ure255 °C	Room temperature491 °F			
Dimension of the calibration insert	Ø 60 x 170 mm (calibration insert easily exchangeable)					
Dry block Air Shield Insert	External reference temperature sensor					
Display accuracy	±0.08 °C		0.144 °F	0.144 °F		
Temperature stability	±0.010 °C		0.018 °F	0.018 °F		
Temperature distribution						
→ Axial	±0.080 °C		0.144 °F			
→ Radial	±0.050 °C		0.009 °F			
Influence of load	±0.025 °C		0.045 °F			
Dry block	External referen	ice temperature sensor		ce temperature senso		
Display accuracy	±0.25 °C	0.45 °F	±0.5 °C	0.9 °F		
Temperature stability	±0.020 °C	0.036 °F	±0.05 °C	0.09 °F		
Temperature distribution						
→ Axial	±0.300 °C	0.540 °F	±0.300 °C	0.540 °F		
→ Radial	±0.150 °C	0.270 °F	±0.150 °C	0.270 °F		
Influence of load	1 1 1 1	±0.100 °C 0.180 °F  External reference temperature sensor		±0.450 °C 0.810 °F Internal reference temperature sensor		
Calibration bath (stirred), tub insert						
Display accuracy	±0.35 °C	0.63 °F	±0.53 °C	0.954 °F		
Temperature stability	±0.05 °C	0.09 °F	±0.100 °C	0.180 °F		
Temperature distribution  → Axial	±0.300 °C	0.540 °F	±0.300 °C	0.540 °F		
→ Radial	±0.150 °C	0.270 °F	±0.150 °C	0.270 °F		
Influence of load	±0.100 °C	0.180 °F	±0.400 °C	0.720 °F		
Calibration bath (stirred), direct filling		ice temperature sensor		ce temperature senso		
Display accuracy	±0.18 °C	0.324 °F	±0.46 °C	0.828 °F		
Temperature stability	±0.040 °C	0.072 °F	±0.050 °C	0.090 °F		
Temperature distribution	20.010 0	0.072 1	20.000 0	0.030 1		
→ Axial	±0.150 °C	0.270 °F	±0.150 °C	0.270 °F		
→ Radial	±0.150 °C	0.270 °F	±0.150 °C	0.270 °F		
Influence of load	±0.100 °C	0.180 °F	±0.400 °C	0.720 °F		
Infrared calibration	External referer	ice temperature sensor	Internal referen	ce temperature sensoi		
Display accuracy	±0.5 °C	0.9 °F	±0.5 °C	0.9 °F		
Temperature stability	±0.05 °C	0.09 °F	±0.05 °C	0.09 °F		
Emission factor	0,9994		1			
Surface calibration	External referer	ce temperature sensor				
Display accuracy	±1 °C		±1.8 °F			

<sup>\*</sup> Extended measurement uncertainty according to DAkkS-DKD-R 5-4



# **Technical data**

TP 3M255E.2 / TP 3	3M255E.2i					
Stabilisation time						
(with external referer	nce temperature sensor)					
$\rightarrow$ to ±0.05 °C	→ to ±0.09 °F	From 1 min				
→ to ±0.005 °C	→ to ±0.009 °F	From 5 min				
Heating time						
→ 20 °C245 °C	→ 68473 °F	15 min				
→ 20 °C255 °C	→ 68491 °F	17 min				
Cooling time						
→ 255 °C30 °C	→ 49186 °F	50 min				
Resolution of the te	mperature display	0.001 °C 0.001 °F				
Hysteresis		±0.010 °C ±0.018 °F				
Temperature units		°C / °F / K (selectable)				
Reference temperat	ture sensor	internal, fixed installation / external (selectable)				
Interfaces		Ethernet, 3 x USB				
Connectivity		OPC UA, HTTP. Details and further possibilities on request.				
Dimensions						
→ Width		210 mm				
→ Height		330 + 50 mm (Handle)				
→ Depth		300 mm				
Weight		Approx. 8.5 kg				
Power supply		110115 V 60 Hz / 230 V 50 Hz Protective conductor (PE) needed				
Power consumption	]	Approx.1000 W				
Adjustable tempera	ture range	0255 °C 32491 °F				
Display		Brilliant color touchscreen (7 inches), multi panel safety glass				
Approvals						
		CE CONTUNT EMELLA CO				



07/2023 // V1.6 6 // 12

### The integrated measuring instrument in detail

Resistance thermometers, thermocouples and signals from temperature transmitters must be operated with an external measuring instrument which measures the output signals and displays them as temperature during the calibration. This temperature can then be compared to the set calibrator temperature.

Our integrated measuring instrument assumes the tasks of an external measuring instrument. It shows the temperature directly on the calibrator display and enables the fully automatic calibration of two devices under test at the same time.

#### Your benefits of the integrated measuring instrument at a glance:

- Temperature sensor calibration without additional measuring instrument
- · Simultaneous calibration of several temperature sensors
- Fully automatic calibration and certification
- Enables the simplification of your work processes
- · Offers great time savings compared to a temperature calibrator without integrated measuring instrument

#### The following DUTs can be connected to the integrated measuring instrument:

- Resistance thermometer (RTD): Pt100, Pt500 and Pt1000 in 2-,3- or 4-wire circuit
- Thermocouples (TC) of the types K, J, N, E, R, T, B, S, L and U
- 0(4)...20 mA current signals from temperature transmitters (mA), with and without supply voltage
- 0...10 V voltage signals
- Temperature switch (switch) with normally open and normally closed contacts



# Temperature calibrator TP 3M255E.2i // Integrated measuring instrument Technical data

Device under test inputs - Resistance thermometers					
Number of channels	2				
Connection	4 mm safety socket, 4 per channe	غ			
Connection type	2-, 3-, 4-wire technology				
Resistance range					
→ Pt100	0400 Ω	0400 Ω			
→ Pt1000	04000 Ω	04000 Ω			
Accuracy					
→ Pt100	±0.03 °C	±0.054 °F			
→ Pt500	±0.12°C	±0.216 °F			
→ Pt1000	±0.06 °C	±0.108 °F			
→ Ni100	±0.02 °C	±0.036 °F			
→ Ni500	±0.08 °C	±0.144 °F			
→ Ni1000	±0.04 °C	±0.072 °F			
Device under test inputs - Thermocouple					
Number of channels	2				
Connection	2x thermocouple socket (mini)				
Measuring range	-10100 mV				
Accuracy cold junction	±0.3 °C	±0.054 °F			
Accuracy					
→ Type K	±0.08 °C	±0.144 °F			
→ Type J	±0.07 °C	±0.126 °F			
→ Type N	±0.13 °C	±0.234 °F			
→ Type E	±0.06 °C	±0.108 °F			
→ Type T	±0.09 °C	±0.162 °F			
→ Type R	±0.78 °C	±1.404 °F			
→ Type S	±0.73 °C	±1.314 °F			
→ Type B	±0.5 °C	±0.9 °F			
Standard signal input (Current)					
Number of channels	1				
Connection	4 mm safety socket				
Measuring range	024 mA				
Accuracy	0.01 % of range				
Standard signal input (Voltage)					
Number of channels	1				
Connection	4 mm safety socket				
Measuring range	012 VDC				
Accuracy	0.01 % of range	0.01 % of range			
Switch test					
Number of channels	2				
Transmitter supply					
Output current	Max. 24 mA	Max. 24 mA			
Output voltage	24 VDC				
General technical data					
Annual drift of all measuring inputs	Max. 30% of accuracy				
5 .	,				



07/2023 // V1.6 8 // 12

## **Article numbers**

To order a complete calibrator, you need three article numbers:

- 1. Calibrator
- 2. Linearisation
- 3. Calibration insert

In addition, depending on your individual calibration requirements, you can order additional calibration inserts, necessary certificates and other accessories.

1. Calibrator						
Temperature range		Function	Calibration insert [mm]	Power supply	Integrated measuring instrument	Article number
Room temperature255 °C	RT491 °F	Multifunction	Ø 60 x 170	110240 V	Without	EP3M25 0 26015U3
Room temperature255 °C	RT491 °F	Multifunction	Ø 60 x 170	110240 V	With	EP3M25 I 26015U3

2. Linearisation				
Linearisation				
With linearisation	EPLIK			
Function				
Dry block	DB			
Air Shield Insert*	AS			
Calibration bath (Direct filling)	LI			
Calibration bath (Tub insert)	TI			
Infrared	IR			
Surface*	SU			
Reference temperature sensor				
Internal		1		
External		Е		
Alignment to medium				
No Medium (= Dry block, Air Shield Insert, Infrared, Surface)			00	
Silicone oil 50 cSt (50270 °C / 122518 °F)			50	
Customer-specific medium			99	
Test points				
Standard				0
Customer-specific				K
Example article number	EPLIK DB	I	00	0

<sup>\*</sup> Only with external reference temperature sensor



Technical datasheet

07/2023 // V1.6 9 // 12

# **Article numbers**

3. Calibration insert				
Bore holes [mm]	Function	Calibration insert [mm]	Material	Article number
1x Ø 3.5, 1x Ø 6.5, 1x Ø 8.5, 1x Ø 10.5	Dry block	Ø 60 x 170	Aluminium	EZ16360C04AL05
2x Ø 3.5, 2x Ø 4.5, 2x Ø 6.5, 2x Ø 8.5, 2x 10.5	Dry block	Ø 60 x 170	Aluminium	EZ16360D10AL85
3x Ø 3.5, 3x Ø 6.5, 3x Ø 8.5, 3x 10.5	Dry block	Ø 60 x 170	Aluminium	EZ16360D12AL86
2x Ø 3.5, 1x Ø 4.5, 1x Ø 5.0, 1x 5.5, 1x Ø 6.5, 1x Ø 8.5, 1x Ø 9.0, 1x Ø 9.5, 1x Ø 10.5	Dry block	Ø 60 x 170	Aluminium	EZ16360D10AL87
Without bore holes	Dry block	Ø 60 x 170	Aluminium	EZ16360000AL00
Tub insert	Calibration bath	Ø 60 x 170		EZTPMBEK000000
Calibration insert for infrared calibration	Infrared	Ø 60 x 170		EZ15060B03AL41IR
Calibration insert for surface calibration	Surface	Ø 60 x 170	Aluminium	EZ20460B03AL050F
Calibration insert for aseptic sensors	Aseptic sensors	Ø 60 x 170	Aluminium	EZ17160C02AL59
Air Shield Insert without bore holes	Dry block	Ø 60 x 170	Aluminium	EZ16360000AL00F
Air Shield Insert incl. 1 bore hole of choice	Dry block (ASI)	Ø 60 x 170	Aluminium	
Calibration insert incl. 1 bore hole of choice	Dry block	Ø 60 x 170	Aluminium	Please indicate bore holes in the order
Each additional bore hole	Dry block	Ø 60 x 170	Aluminium	Holes in the order

4. Calibration certificate - Select your calibration certificates as needed  Each calibrator is already delivered with a standard calibration certificate (6 test points).	Article number
SIKA works calibration certificate (similar to standard certificate + marking on the calibrator), 1st calibrator function	EKTPWP1FKT
SIKA works calibration certificate (similar to standard certificate + marking on the calibrator), 1st calibrator function	EKTPWP2FKT
SIKA works calibration certificate (similar to standard certificate + marking on the calibrator), 2nd calibrator function	EKTPWP3FKT
SIKA works calibration certificate (similar to standard certificate + marking on the calibrator), 4th calibrator function	EKTPWP4FKT
DAKKS calibration certificate (3 test points + measurement uncertainty determination) for 1st calibrator function	EKTPDAKKS1FKT
DAkkS calibration certificate (3 test points + measurement uncertainty determination) for 2nd calibrator function	EKTPDAKKS2FKT
DAkkS calibration certificate (3 test points + measurement uncertainty determination) for 3rd calibrator function	EKTPDAKKS3FKT
DAkkS calibration certificate (3 test points + measurement uncertainty determination) for 4th calibrator function	EKTPDAKKS4FKT
Each additional test point DAkkS calibration certificate	EKTPDAKKSZUSP
SIKA Gold Service works calibration certificate	EKTPGOLDWP
SIKA Gold Service DAkkS	EKTPGOLDDAKKS
SIKA works calibration certificate integrated measuring instrument (Pt100, type K)	EKTPWPMI1
SIKA works calibration certificate integrated measuring instrument (Pt100, Pt1000 type K, type J)	EKTPWPMI2
SIKA works calibration certificate integrated measuring instrument (Pt100, type K, mA, V)	EKTPWPMI3
SIKA works calibration certificate integrated measuring instrument (Pt100, Pt1000 type K, type J, mA, V)	EKTPWPMI4
SIKA works calibration certificate for each additional measurement input of your choice (Pt500, Pt1000, type J/N/E/T/R/S, mA, V)	EKTPWPMIZUS
SIKA works calibration certificate complete (Pt100, Pt500, Pt1000, type K/J/N/E/T/R/S, mA, V)	EKTPWPMIKOMPL
DAkkS calibration certificate integrated measuring instrument (Pt100, type K)	EKTPDAKKSMI1
DAkkS calibration certificate integrated measuring instrument (Pt100, Pt1000 type K, type J)	EKTPDAKKSMI2
DAkkS calibration certificate integrated measuring instrument (Pt100, type K, mA, V)	EKTPDAKKSMI3
DAkkS calibration certificate integrated measuring instrument (Pt100, Pt1000 type K, type J, mA, V)	EKTPDAKKSMI4
DAkkS calibration certificate for each additional measurement input of your choice (Pt500, Pt1000, type J/N/E/T/R/S, mA, V)	EKTPDAKKSMIZUS
DAkkS calibration certificate complete (Pt100, Pt500, Pt1000, type K/J/N/E/T/R/S, mA, V)	EKTPDAKKSKOMPL



Technical datasheet

07/2023 // V1.6 10 // 12

# **Article numbers**

5. Accessories	Article number
Transport case without trolley	EZTPKOFFER007
Transport case with trolley	EZTPKOFFER007TG
External reference temperature sensor TF 255 (-55255 °C / -67491 °F)	W033P413000GX0R2
External reference temperature sensor TF 255 (-55255 °C / -67491 °F), 90° angle	W033P413000GX0RI
External reference sensor as cable sensor (for function EPLIKSDE000)	W043P410400G3002
Tripod	EZTPMSG0000000
Calibration liquid (silicone oil), 50cSt	EZSÖ0500000000
Calibration liquid (silicone oil), 20cSt	EZSÖ0200000000
Calibration liquid (silicone oil), 10cSt	EZSÖ0100000000
Calibration liquid (silicone oil), 5cSt	EZSÖ0050000000
Network switch	XE2103
Barcode scanner	XE2102
W-LAN router	XE2101
USB Camera for DUT monitoring	XE2375
Camera holder for USB Camera	XE2370
DUT temperature sensor for demo purposes (Pt100 3-phase) for integrated measuring instrument	WMQMP31020050003
Bore hole divider for Air Shield Insert 3 x Ø 3 mm sensors from Ø 9 mm bore hole	XE2194
Spare part extension spring for Air Shield Insert	XE2267
Instruction in the temperature calibrator by SIKA field service	EKTPEINWEISUNG
Frame packaging for return of calibrator (e.g. for recalibration) Please indicate the calibrator model when ordering.	098V

## **Overview of SIKA temperature calibrators**

#### Our series: Basic. Solid. Premium.

- Dry block calibrators of the TP Basic series impress with their uncomplicated operation and high cost-effectiveness.
   They are particularly suitable for use on ships or in industrial applications.
- Equipped with a PC interface, the dry block calibrators and calibration baths of the TP Solid series cover a wide temperature range with high accuracy.
- For the highest demands on accuracy and flexibility:
   The dry-block and multi-function temperature calibrators of the TP Premium series represent the pinnacle of our technical development. Equipped with an integrated touch screen, a PC interface, an external reference sensor and integrated measuring instrument, this series offers extreme accuracies for all calibration tasks.

Temperature range (RT=Room temperature)	Function	Accuracy		Features	Block dimensions [Ø mm x depth mm]	Туре
FF *0	Dry block	±0.4 °C	±0.72 °F	TP Basic	28 x 150	TP 17200
-55 °C 200 °C -67 °F 392 °F	Dry block	±0.2 °C	±0.36 °F	TP Solid	28 x 150	TP 17200S
-0/ F 392 F	Dry block	±0.2 °C	±0.36 °F	TP Premium	28 x 150	TP 37200E.2
-35 °C 155 °C -31 °F 311 °F	Calibration bath	±0.1 °C	±0.18 °F	TP Solid	60 x 170	TP M165S
	Dry block	±1 °C	±1.80 °F	TP Basic	28 x 150	TP 17165M
	Dry block	±0.4 °C	±0.72 °F	TP Basic	28 x 150	TP 17165
	Dry block	±0.2 °C	±0.36 °F	TP Solid	28 x 150	TP 17165S
	Dry block	±0.2 °C	±0.36 °F	TP Premium	28 x 150	TP 37165E.2
-35 °C 165 °C	Dry block ext.	±0.2 °C	±0.36 °F			
-31 °F 329 °F	Dry block int.	±0.3 °C	±0.54 °F			
	Air Shield Insert	±0.07 °C	±0.126 °F	TP Premium	60 x 170	TP 3M165E.2
	Calibration bath	±0.1 °C	±0.18 °F	TT TTEITHGITT	00 X 17 0	0002.12
	Infrared	±0.5 °C	±0.9 °F			
	Surface	±1 °C	±1.88 °F	TD D .		
-30 °C 165 °C	Dry block	±0.4 °C	±0.72 °F	TP Basic	60 x 150	TP 17166
-22 °F 329 °F	Dry block	±0.2 °C	±0.36 °F	TP Solid	60 x 150	TP 17166S
-10 °C 100 °C 14 °F 212 °F	Dry block	±0.05 °C	±0.09 °F	TP Solid	7 x 6.5 x 150	TP 17Zero
RT 200 °C RT 392 °F	Dry block	±1 °C	±1.80 °F	TP Basic	18 x 150	TP 18200E
	Calibration bath	±0.2 °C	±0.36 °F	TP Solid	60 x 170	TP M255S
RT 255 °C RT 491 °F	Dry block ext. Dry block int. Air Shield Insert Calibration bath, tub insert, ext. Calibration bath, tub insert, int. Calibration bath, direct filling, ext. Calibration bath, direct filling, int. Infrared Surface	±0.25 °C ±0.5 °C ±0.08 °C ±0.35 °C ±0.53 °C ±0.18 °C ±0.46 °C ±0.5 °C ±1 °C	±0.45 °F ±0.9 °F ±0.144 °F ±0.63 °F ±0.954 °F ±0.828 °F ±0.9 °F ±1.8 °F	TP Premium	60 x 170	TP 3M255E.2
	Dry block	±0.6 °C	±1.08 °F	TP Basic	60 x 150	TP 17450
	Dry block	±0.3 °C	±0.54 °F	TP Solid	60 x 150	TP 17450S
RT 450 °C RT 842 °F	Dry block Air Shield Insert Infrared Surface	±0.3 °C ±0.2 °C ±0.5 °C ±1 °C	±0.54 °F ±0.36 °F ±0.9 °F ±1.8 °F	TP Premium	60 x 150	TP 37450E.2
	Dry block	±1 °C	±1.8 °F	TP Basic	28 x 150	TP 17650M
RT 650 °C	Dry block	±0.8 °C	±1.44 °F	TP Basic	28 x 150	TP 17650
RT 1202 °F	Dry block	±0.4 °C	±0.72 °F	TP Solid	28 x 150	TP 17650S
RT 700 °C RT 1292 °F	Dry block Air Shield Insert	±0.43 °C ±0.27 °C	±0.744 °F ±0.486 °F	TP Premium		TP 37700E.2
RT 850 °C RT 1562 °F	Dry block	±1 °C	±1.8 °F	TP Basic	18 x 100	TP 18850E
400 °C 1300 °C 752 °F 2372 °F	Dry block	±2 °C	±3.6 °F	TP Solid	28 x 200	TP 281300E

Subject to technical modifications and errors

SIKA Dr. Siebert & Kühn GmbH & Co. KG Struthweg 7-9 // 34260 Kaufungen // Germany www.sika.net